


TK GUIDELINE

AIR FILTER CLEANING

MODELS :

TK500 – TK1000 – TK 2000

Air filter cleaning

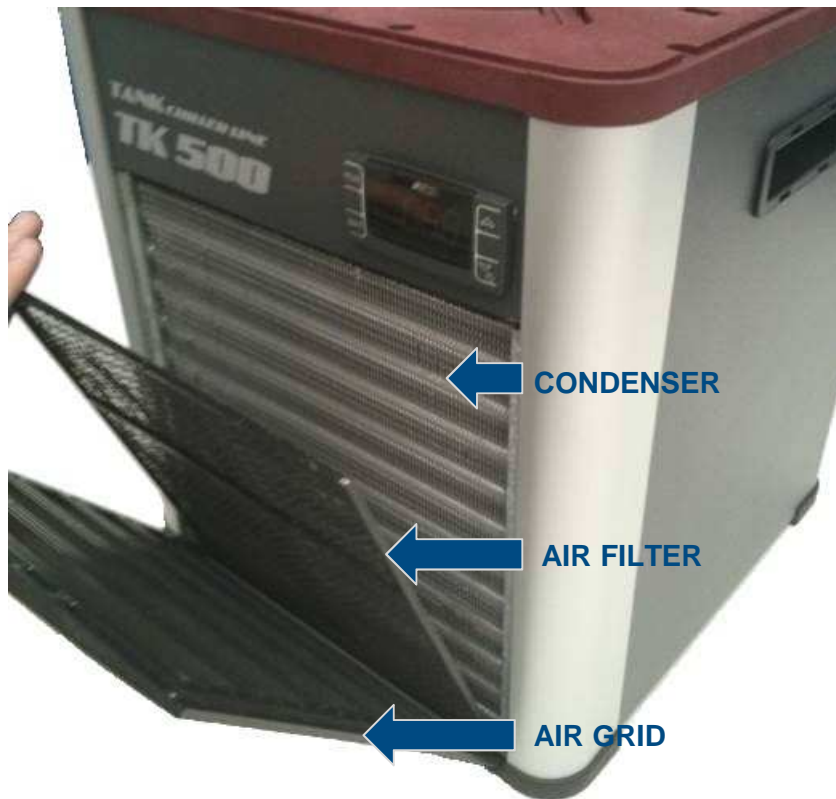

- 1) *Disconnect chiller from Power Supply*
- 2) *Pull the top of the grid that is in the front of the chiller. The grid will rotate on its feet .*
- 3) *Extract the air filter, paying attention to not touch the condenser that could be hot.*
- 4) *Push the grid to place it in the same way as it was initially*
- 5) *Wash the filter with fresh water directly in the sink.*
- 6) *If water is not sufficient to clean it, please use a soft bristle brush and mild soap to remove the filth and then wash it very well without leave any trace of soap.*
- 7) *Wait until the filter is completely dry.*
- 8) *Go back to the chiller and pull the grid to insert the air filter and then push the grid to close it.*